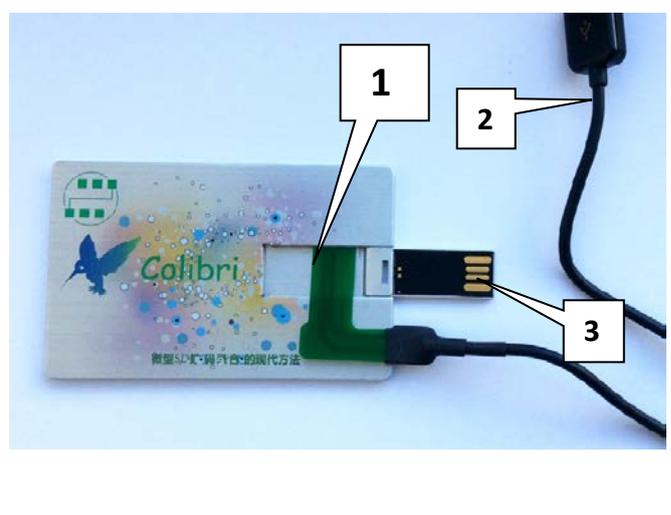


Quick Start Guide

Control and indication of the Recorder's modes are carried out using two hole-buttons and three-color LED (between buttons) on the front side of the device. For pressing hole-buttons it is recommended to use fine wooden or plastic stick. Colibri-SD may be used both as voice recorder to record audio files and as flash card to store any other information.

 <p>Voice Recorder. Front view.</p>	 <p>Opened Recorder. USB-charger.</p>
<ol style="list-style-type: none"> 1. RECORD button. 2. LED of Status Control. 3. STATUS Button. 4. Microphones 5. To open flash card chip push down on the right edge of the outlined rectangular area. 	<ol style="list-style-type: none"> 1. Slot for micro SD-card and adaptor for charging. 2. Micro SD – USB adapter for connecting to PC for charging. 3. Flash card chip

Charging and setting parameters

1. Charge the recorder's battery using adaptor by connecting it to USB-port of any PC. For that, if necessary remove SD-card and insert in this slot Micro SD – USB adapter. Then connect Recorder with adapter to USB of the computer.
2. To initialize micro SD card insert it to the holder. Then, insert the holder with micro SD to the PC, run the built-in program "Kolibri_5.exe", perform the needed settings and click "WRITE CONFIGURATION". In order to keep time on the recorder the same as on the PC, quickly insert SD card to the recorder and press left hole-button (RECORD button).
3. The LED flashes red, then blue then turns off.
4. The recorder is initialized and ready to operate.

5. The recording can be saved onto supplied micro SD or to any other. But you should remember the password (in case of its setting). If the password is not set, the recorded information can be played back using any other micro SD player. If the password is set, before playback it is necessary to descramble the files saved with password using program.

The list of modes and their corresponding LED colors are specified in the Table below:

LED color	Mode
Switched off	Battery is discharged.
Red	Voice Recorder is in Record Mode . Information from the Mic is recorded onto memory
Green	Standby Mode . Recorder is ready to start operating or charging.
Blue	Micro SD card is not inserted. Recording is impossible.

Record Mode Activating

For activation of Record Mode, press the Record button (left one). The LED flashes, its color changing in the following order: Red → green → off.

To stop recording, press the Record button, the LED flashes, its color changing in the following order: red → off → red → off.

Precautionary Measures

Please note!

- Due to shape of a thin rectangular plate the Recorder must be handled carefully! Do not place the device into the pants pocket; it could be damaged when sitting down. Do not bend or hit the Recorder!
- It is also recommended to store the device in a protective case.