

TO UPGRADE THE FIRMWARE TO VERSION 1.26, FOLLOW THESE INSTRUCTIONS:

Please note! When upgrading firmware on Windows7 it is necessary to disable antivirus program. Otherwise the firmware will be installed improperly and further firmware update will be possible only by manufacturer!

1. Connect audio recorder to the computer. **For recorders with changeable battery, the battery must be inserted!**
2. From Firmware archive (Updater 1.26 Edic-mini Tiny+ or 16+ series, March 2015) run **ETp_FW_Updater_1_26.exe** for Tiny+ models and **ET16p_FW_Updater_1_26.exe** for Tiny 16+ models.
3. After updating is completed, disconnect the recorder with adapter from PC, then disconnect adapter from the recorder and wait until the led finally turns off.
4. Connect audio recorder to the computer and from Software archive (Image files for Tiny+ and Tiny16+) start **Writelmg.bat**.
5. After updating is completed, disconnect the recorder with adapter from PC, then disconnect adapter from the recorder and wait until the led finally turns off.
6. Connect the recorder to the computer and run **EMPlus.exe** program from removable drive. After installation is complete, in Start/Programs/EM Plus find EMPlus, SoundProcessor and operation manuals.